


HÅG Capisco & HÅG Capisco Puls

INS-P8000-R3-PAC


ASSEMBLY INSTRUCTIONS

9to5
seating


PARTS

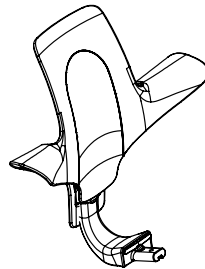


Back (x1)

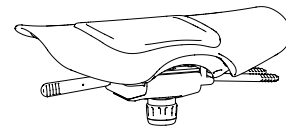

Seat (x1)

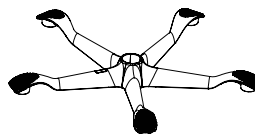

Base (x1)



Cylinder (x1)



Casters (x5)

TOOLS



Allen Wrench (x1)
(attached to the
bag with casters)

HARDWARE




Bolts (x1)
(attached to the
mechanism)

All parts come pre-attached in the back and/or seat.
Missing parts or hardware? Call 888.925.SEAT



STEP 1

Attach the casters and cylinder to the 5-star base.

1A. Firmly press the stems
of 5 casters into the 5 holes
in the base.

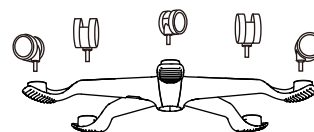


1B. Insert cylinder into
the center hole.




STEP 2



Attach the back to the seat.

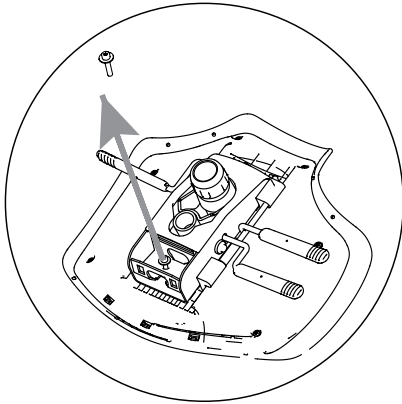

2A. Using the Allen wrench, remove the single bolt from the mechanism.

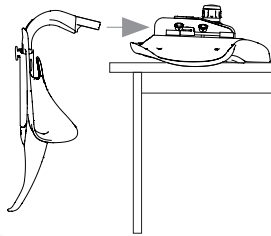

2B. Place the back plate under the seat as shown.

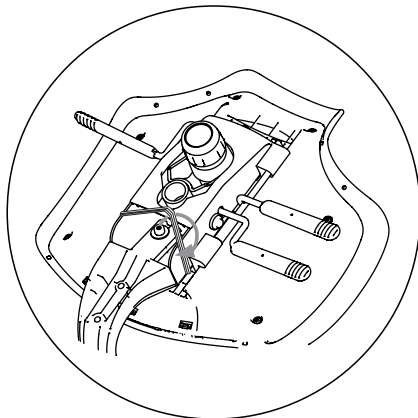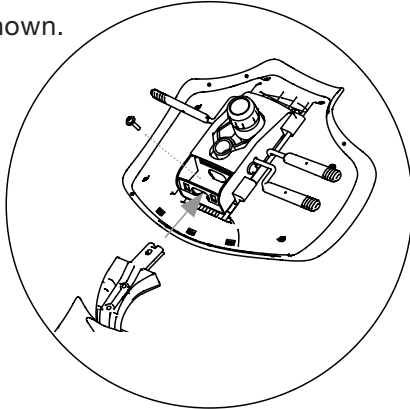

2C. Using the Allen wrench, tighten the bolt from the top.

STEP 3

Join the back and seat with the cylinder and base.

Insert the assembled back/seat unit onto the cylinder, which was placed in the base in Step 1. Press down firmly to secure.

