


# SILVER TRAP TRICKLE TANK

(ST-TT4 or ST-TT7)

## INSTALLATION INSTRUCTIONS

1. Place the Trickle Tank on top of Multi-Media Canister (ST-MM4 or ST-MM7). NOTE: If another location is desired for Trickle Tank, make sure that the Trickle Tank outlet is higher than the Multi-Media Canister inlet.
2. Connect the supplied Silver Trap filter and flow restrictor to the Trickle Tank outlet and secure with hose clamps. Observe the flow direction arrow on the filter top.
3. Connect the outlet of the Silver Trap filter flow restrictor assembly tubing to the inlet of the Multi-Media Canister and secure with the hose clamp.
4. Connect the supplied discharge tubing to the Multi-Media Canister's discharge outlet. Route the discharge tubing from the Multi-Media Canister to the drain or waste containment unit (based on local discharge regulations).
5. Fill the Trickle Tank completely with water to pre-fill the Multi-Media Canister
6. The Trickle Tank can now be filled with solution and with pinch clamps open, will slowly dispense solution to the Multi-Media Canister.

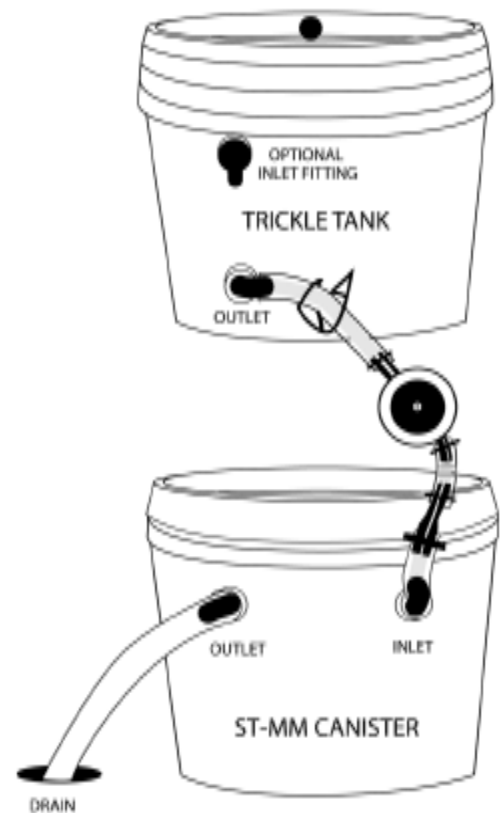

COPYRIGHT 1997-Revision Edition Date: May, 2005



**ENVIRONMENTAL RECLAMATION, DIV.**

P.O. Box 835 • West Bend, WI 53095-0835 U.S.A.

Phone 1-262-334-3000 • Fax 1-262-334-6222 • [www.silverprofit.com](http://www.silverprofit.com)

SILVERPROFIT **COM**